


## **FITTING INSTRUCTIONS**

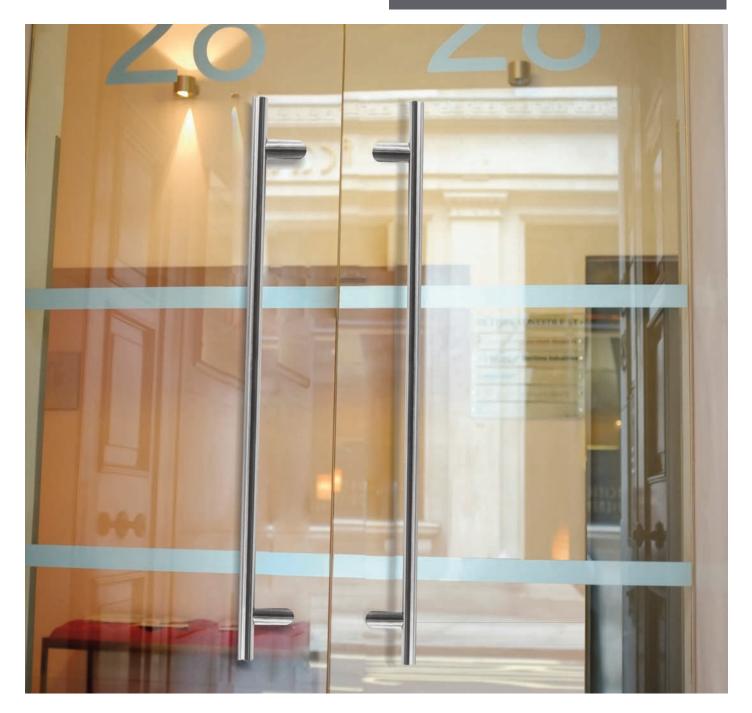

# **CRANKED PULL HANDLES**














### Fitting instructions FOR CRANKED PULL HANDLES

#### **Bolt through fixing**

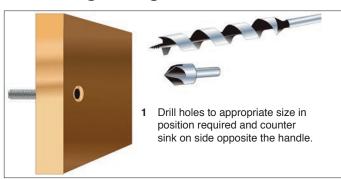

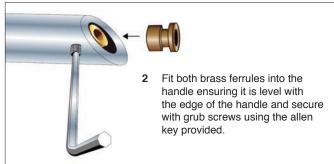

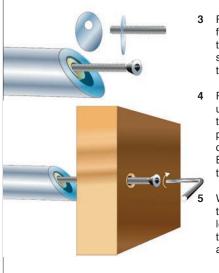



- Fit the bolts through the fixing holes and place the washers on the door side where the handle is to be fitted.
- Present the pull handle up to the bolts and tighten ensuring the plastic washer is in the correct position. N.B. Bolts may have to be cut to the correct size.


When you have checked the bolts are the correct length for your door tighten fully using the allen key provided.




#### **Back to back fixing**

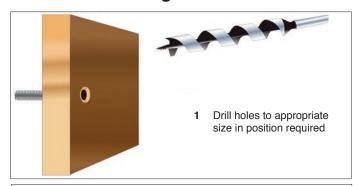

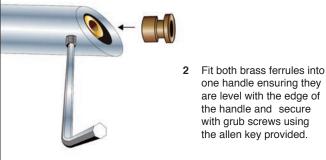




- Fit bolts into the ferrules and tighten as far as they will go.
- Fit the plastic washers over the bolts and place bolts through the fixing holes.

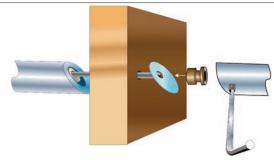

- Fit the plastic washers on the other side of the door and then fit the remaining two brass ferrules onto the bolts. Offer up the handle to the bolts and place over the ferrules .N.B. At this stage you may have to cut the bolts to size.
- 6 When you have checked the bolts are the correct length tighten the bolts into the first handle and the fit the second handle over the brass ferrules and secure with grub screws using the allen key provided ensuring the plastic washer is correctly positioned...

#### **Fixing to glass doors**

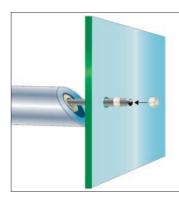

Fixing to glass doors uses the same methods as above but when fixing please use the white plastic sleeve in the bolt hole to protect the glass.